

Lowrider montieren


1. Der Lowrider wird vorne kettenseitig zwischen M6 Mutter und Halteblech befestigt (1). Die Befestigung auf der anderen Seite erfolgt mittels der M6x70 Schraube und einer Distanzhülse(2) welche am Halteblech angeschraubt wird.
2. Setzen Sie die 50mm langen Distanzhülsen(3) hinten auf die dafür vorgesehenen Gewindeaugen. Schrauben Sie den Lowrider mit den mitgelieferten M6x70 Schrauben fest.

Zweibeinständer montieren

1. Tauschen Sie die Streben(4) (Bohrungsabstand 305mm) gegen die mitgelieferten Streben mit dem Bohrungsabstand 400mm aus.
2. Schrauben sie den Zweibeinständer am Halteblech (1) an den dafür vorgesehenen Bohrungen mit M6x16 Schrauben und der selbstsicherenden Mutter fest.
3. Die hinteren Streben werden mit M6x40 Schrauben und 25mm langen Distanzhülsen (6) befestigt, wie im Bild rechts zu sehen. Jetzt ist der Ständer einsatzbereit.

Zweibeinständer und Lowrider montieren

1. Befestigen Sie den Zweibeinständer und Lowrider vorne am Fahrrad wie bereits beschrieben.
2. Für die hinteren Befestigung stecken Sie die M6x70 Schraube nacheinander durch den Lowrider, eine 25mm Distanzhülse, die Strebe(1) vom Zweibeinständer und eine weitere 25mm Distanzhülse. Schrauben Sie die M6x70 Schraube fest am Rahmen an.

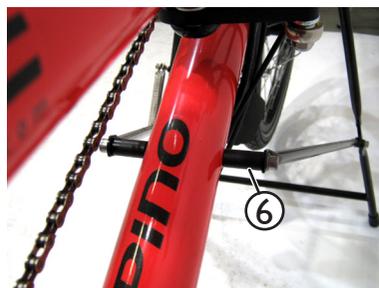

Mounting the Lowrider

1. The front of the Lowrider will be fixed between M6 nut and holding plate (1) on the right side. For the left side place the Lowrider between the M6x70 Bolt and the 25mm distance sleeve(2).
2. For the back of the Lowrider you have to use M6x70 screws and the 50mm distance sleeves (3) on both sides to fix it in the eyelets.

Mounting the Double Kickstand

1. Unscrew the pipes (4) (borehole distance 305mm) and mount the pipes with a borehole distance of 400mm instead of them.
2. Mount the front of the kickstand on the holding plate (1) at the boring. Use the M6x16 Bolts and the nut to fix the front of the kickstand in the borehole.
3. The back of the kickstand must be fixed with M6x40 bolts and 25mm distance sleeves (4) at the eyelet, like shown in the picture. Now you can use the double Kickstand.

Mounting the Double Kickstand an Lowrider

1. The front of the Lowrider and kickstand will be mounted like explained before.
2. To fix the backside, you have to put the M6x70 bolt into the Lowrider, a 25mm distance sleeve, the kickstand pipe(1) and a second 25mm distance sleeve right in this order. Than tight the Bolt in the Pino frame.